

## Linear X-Ray Photodiode Detector Array with Signal Amplification

# **XB8804R Series**

An X-Scan Imaging XB8804R linear detector array is constructed of CMOS silicon photodiode array detector chips mounted on a single printed-circuit board. The imaging circuit of each detector chip consists of a contiguous linear array of photodiodes, a timing generator, digital scanning shift register, an array of charge integrating amplifiers, sample-and-hold circuits, and signal amplification chain. Each detector array generates an End-Of-Scan (EOS) pulse that can be used to initiate the scanning of the next detector array. Thus, a longer, continuous detector array can be formed from a daisy chain of smaller detector arrays.


For x-ray scanning applications, a scintillator material tailored to the user's application is attached to the surface of the detector array to convert x-ray photons into visible light for detection by the photodiode array. The XB8804R photodiode array is uniquely designed and processed to reduce radiation damage from the x-ray flux. The signal processing circuits are positioned 2 mm away from the photodiode array. These circuits are shielded from direct x-ray radiation using an external heavy-metal shield. The precision alignment of the metal shield with respect to the signal processing circuits is performed at the factory using a special molded housing and chipon-board (COB) technology.

## **Key Features**

- Large element pitch with two selectable resolution modes: 0.4 mm and 0.8 mm
- Different array lengths available:
  - o 2.0 inches (128 pixels at 0.4 mm, 64 pixels at 0.8 mm),
  - 4.0 inches (256 pixels at 0.4 mm, 128 pixels at 0.8 mm),
  - o etc.
- 5-V power supply operation
- Simultaneous integration by using an array of charge integrating amplifiers
- Sequential readout with a digital scanning shift register (Data rate: 1 MHz max.)
- Integrated CDS circuits allow low noise and wide dynamic range up to > 4000
- User-specified scintillator material GOS:Tb, CsI:Tl, CdWO<sub>4</sub>, etc.
- Extended radiation hardness lifetimes

## Applications

• Linear x-ray imaging for industrial and food inspection

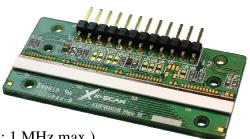

• Linear x-ray imaging for homeland security and contraband screening

Parameter	Symbol <sup>i</sup>	XB8804R-2.0 <sup>ii</sup> (low resolution 0.8-mm mode) <sup>iii</sup>	XB8804R-2.0 (high resolution 0.4-mm mode) <sup>iv</sup>	XB8804R-4.0 (low resolution 0.8-mm mode)	XB8804R-4.0 (high resolution 0.4-mm mode)	Unit
Element pitch	Р	0.8	0.4	0.8	0.4	mm
Element diffusion width	W	0.76	0.36	0.76	0.36	mm
Element height	Н	1.2	0.6	1.2	0.6	mm
Number of elements	-	64	128	128	256	-
Active area length	_	51.2	51.2	102.4	102.4	mm


## Mechanical specifications

<sup>i</sup> Refer to enlarged view of active area figure.

<sup>ii</sup> 2-inch and 4-inch long detector are specified here. Other lengths (at multiples of 0.5 inches) are available upon special request. <sup>iii</sup> When RS (pin 12) is tied to GND, the detector operates in the low 0.8-mm resolution mode. There are 64 pixels in a 2-inch detector (XB8804R-2.0) in 0.8-mm mode. There are 128 pixels in a 4-inch detector (XB8804R-4.0) in 0.8-mm mode.

<sup>iv</sup> When RS (pin 12) is tied to VDD, the detector operates in the high 0.4-mm resolution mode. There are 128 pixels in a 2-inch detector (XB8804R-2.0) in 0.4-mm mode. There are 256 pixels in a 4-inch detector (XB8804R-4.0) in 0.4-mm mode.

#### ■ Enlarged view of active area

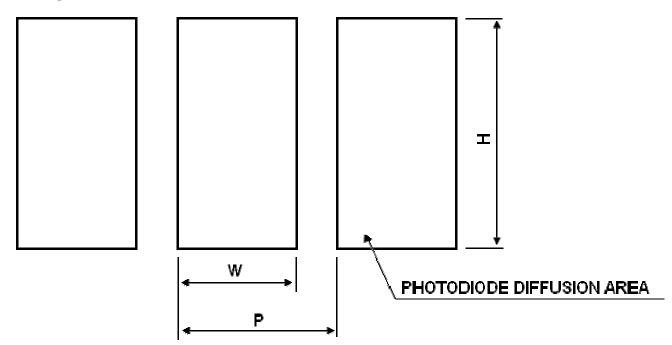

#### ■ Absolute maximum ratings



*Electronic device sensitive to electrostatic discharge and x-ray radiation.* Although this device features ESD protection circuitry, permanent damage ranging from subtle performance degradation to complete device failure may occur on devices subjected to high-energy electrostatic discharges. Furthermore, although this device features radiation shielding for protection against anticipated x-ray radiation, permanent damage ranging from subtle performance degradation to complete device failure may occur on devices subjected to occupie device failure may occur on devices subjected to unanticipated x-ray radiation (e.g. off-axis or extremely high energy radiation). Therefore, proper precautions against ESD and x-ray radiation must be taken during handling and storage of this device.

Parameter	Symbol	Min	Max	Unit
Supply voltage	VDD	-0.3	+6	V
Reference voltage	VREF	-0.3	VDD + 0.3	V
Digital input voltages		-0.3	VDD + 0.3	V
Operating temperature <sup>v</sup>	Topr	-5	+60	°C
Storage temperature	Tstg	-10	+70	°C

<sup>v</sup> Humidity must be controlled to prevent the occurrence of condensation.

## Recommended terminal voltage

Parameter	Symbol	Min.	Тур.	Max.	Unit
Supply voltage	VDD	4.75	5	5.25	V
Reference voltage <sup>vi</sup>	VREF	_	4.50	_	V

<sup>vi</sup> Reference voltage changed from 3.0V at previous version of XB8808 to 4.5V at current 0.8mm mode.

## ■ Electrical characteristics [Ta = 21°C, VDD = 5 V]

Parameter	Symbol	Min.	Тур.	Max.	Unit		
Digital			-		-		
Clock pulse frequency <sup>vii</sup>		f(CLK)	40	_	4000	KHz	
Digital input voltage <sup>viii</sup>	High level	Vih	VDD-1.2	VDD	VDD	V	
Digital input voltage	Low level	Vil	0	0	0.8	V	
Digital input capacitance		Ci	_	40	-	pF	
Digital input leakage curr	rent	Ii	-10	+10	-	μΑ	
Digital output voltage <sup>ix</sup>	High level	Voh	VDD-0.75	VDD	VDD	V	
Digital output voltage	Low level	Vol	0	0	0.4	V	
Digital output load capaci	itance	Со	—	—	50	pF	
Analog							
Reference voltage input in	mpedance	Rref	—	5	—	KΩ	
Charge amplifier	High sensitivity	Cfhs	-	0.5	-	pF	
feedback capacitance <sup>x</sup>	Low sensitivity	Cfls	-	1.5	_	pF	
Video output impedance	Zv	—	1	—	KΩ		
Video output load capacit	Cv	_	_	100	pF		
Power	Power						
Power consumption		Р	_	200	-	mW	

<sup>vii</sup> Video rate is 1/4 of clock pulse frequency f(CLK).
<sup>viii</sup> Digital inputs include CLK, RESET, EXTSP, VMS, SNS, and RS (see pin connections).

<sup>ix</sup> Digital outputs include Trig and EOS (see pin connections).

<sup>x</sup> The sensitivity selection pin (see SNS in pin connections) controls the sensitivity of the detector by selecting whether the pixel charge amplifier feedback capacitance is Cfhs or Cfls. At Cfhs, the detector has high sensitivity. At Cfls, the detector has low sensitivity.

■ Electro-optical characteristics [Ta = 21°C, VDD = 5 V, V(SNS) = 5 V (High sensitivity), 0 V (Low sensitivity)]

Parameter		XB8804R Symbol (0.8 mm mode)		XB8804R (0.4 mm mode)			Unit		
			Min.	Тур.	Max.	Min.	Тур.	Max.	
Output offset voltage <sup>xi</sup>		Vos	1	VREF		1	VREF	_	V
Dark officiat volto co <sup>xii</sup>	High sensitivity	Vd	-40	-	40	-40	_	40	mV
Dark offset voltage <sup>xii</sup>	Low sensitivity	va	-40	-	40	-40	_	40	
	High sensitivity	S	_	9600 (to be revised downward)	_	_	2400	_	V/R
X-ray sensitivity <sup>xiii</sup>	Low sensitivity			3200 (to be revised downward)	_	-	800	_	
Photo response non-uniformity <sup>xiv</sup>		PRNU	-10	-	10	-10	_	10	%
Noise <sup>xv</sup>	High sensitivity	N	_	2.0	_	-	1.0	_	mVrms
INDISE	Low sensitivity	Ν	_	0.7	_	_	0.6	_	III V IIIIS
Saturation output voltage		Vsat	3.0	_	_	3.0	_	_	V

<sup>xi</sup> Video output is negative-going output with respect to the output offset voltage.

<sup>xii</sup> Difference between output signal under dark conditions and Vref with an integration time of 1 ms.

<sup>xiii</sup> Measured with tube energy of 70KVp. Other scintillations with different sensitivity are available.


<sup>xiv</sup> Measured without scintillation. When the photodiode array is exposed to uniform light which is 50% of the saturation exposure, the Photo Response Non Uniformity (PRNU) is defined as follows:

 $PRNU = \Delta X \div X \times 100\%$ 


where X is the average output of all elements and  $\Delta X$  is the difference between the maximum and minimum outputs.

<sup>xv</sup> Measured with a video data rate of 750 KHz and an integration time of 1 ms in dark state.


## Output waveform of one element

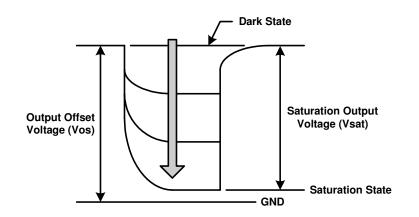


## Block diagram

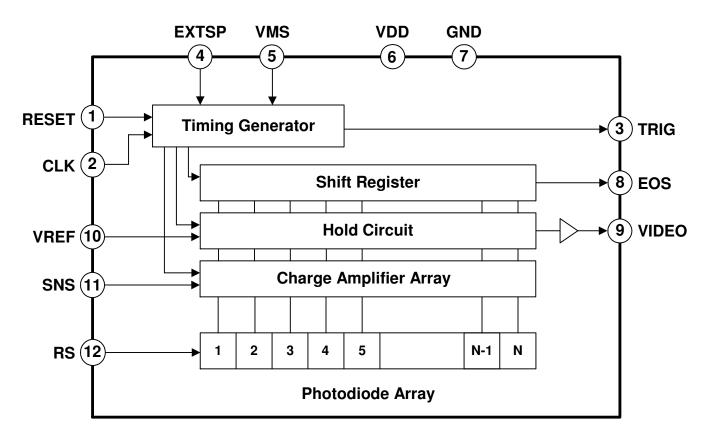

## ■ Timing chart<sup>xvi</sup>

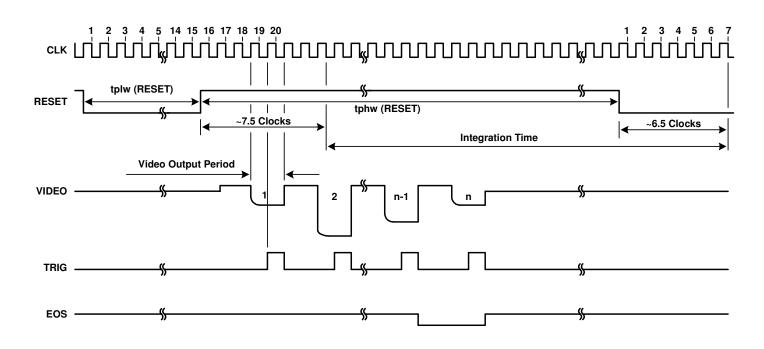

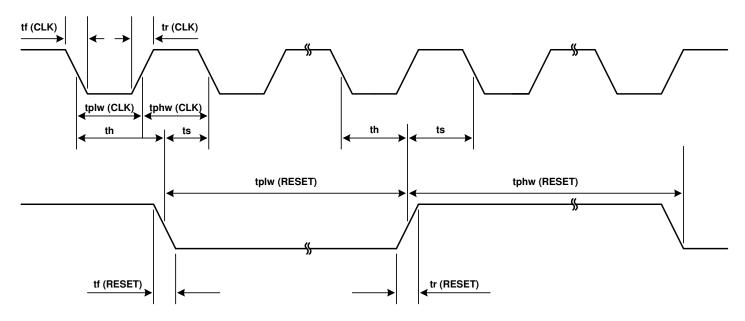

Parameter	Symbol	Min.	Тур.	Max.	Unit
Clock pulse low/high width	tplw (CLK), tphw (CLK)	100	—	-	ns
Clock pulse rise/fall times	tr (CLK), tf (CLK)	0	20	30	ns
Reset pulse low width <sup>xvii</sup>	tplw (RESET)	12 / f(CLK)	16 / f(CLK)	-	ms
Reset pulse high width <sup>xviii</sup>	tphw (RESET)	20	-	-	μs
Reset pulse rise/fall times	tr (RESET), tf (RESET)	0	20	30	ns
Reset pulse setup time <sup>xix</sup>	ts	40	—	-	ns
Reset pulse hold time	th	40	_	_	ns

<sup>xvi</sup> The falling of Video just before the 19<sup>th</sup> falling edge of CLK after transition of RESET from High to Low corresponds to the first pixel. The video output for the first pixel should be read around the 20<sup>th</sup> falling edge and before the subsequent rising CLK edge while Trig is high. After the first pixel, a pixel output appears on Video at every 4th clock cycle.

Care should be taken to prevent the rising edge of the RESET during the video output. Improper positioning of the RESET edges can lead to interference with the read-out.

The falling edge of the RESET should follow the last pixel of the previous line's read-out. Thus, one cycle of RESET pulses cannot be set shorter than the time equal to  $(17 + 4 \times N)$  clock cycles, where N is the number of pixels.


EOS of each detector chip appears during the output of the last pixel.

xvii RESET must stay Low [tplw(RESET)] for at least twelve clock cycles.

<sup>xviii</sup> The falling edge of RESET pulse determines the end of the integration time and the start of signal read-out, while the rising edge of the RESET pulse determines the start of the integration time. As a result, the signal-charge integration time can be controlled externally with the width of the RESET pulse [tphw(RESET)]. However, the charge integration does not start at the rise of a RESET pulse but starts at the 8<sup>th</sup> falling edge of clock after the rise of the RESET pulse and ends at the 7<sup>th</sup> falling edge of clock after the fall of the RESET pulse.

xix The rising and falling edges of RESET must observe the setup and hold time requirements around the falling edges of CLK.

## Mechanical drawings<sup>xx</sup>

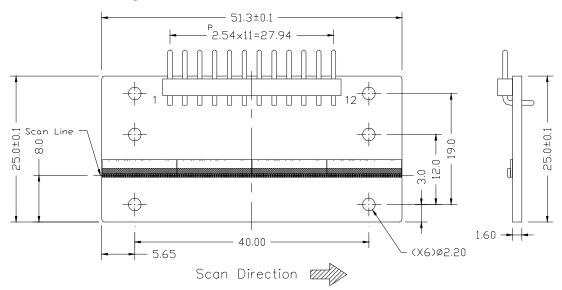

<sup>xx</sup> Part: 2-inch detector (XB8804R-2.0). For 0.8mm mode, scan line is 7.7mm from board edge.

Units: Dimensions are in millimeters (mm).

Board: FR4 epoxy resin bonded glass fabric.

Connector: BISON Advanced Technology Corp., Ltd. (www.bison-protech.com), P101-RGP-060/030-12 or similar.

Pin No.	Symbol	Name	Description
1	RESET	Reset Pulse	Negative-going pulse input
2	CLK	Clock Pulse	Pulse input
3	TRIG	Trigger Pulse	Positive-going pulse output
4	EXTSP	External Start Pulse	Pulse/voltage input
5	VMS	Master/Slave Selection Voltage	Voltage input: See Master/slave selection voltage VMS and external start pulse EXTSP settings note
6	VDD	Supply Voltage	5-V supply voltage
7	GND	Ground	Common ground voltage
8	EOS	End of Scan	Negative-going pulse output
9	VIDEO	Video Output	Negative-going output with respect to VREF
10	VREF	Reference Voltage	Voltage input
11	SNS	Sensitivity Selection	Voltage input: High (VDD) for high sensitivity (Cfhs) Low (GND) for low sensitivity (Cfls)
12	RS	Resolution Selection	Voltage input: (Disabled for 0.8mm mode only; don't care) High (VDD) for 0.4-mm pitch Low (GND) for 0.8-mm pitch

## Pin connections

#### ■ Master/slave selection voltage VMS and external start pulse EXTSP settings

For most applications, multiple detectors are read out in parallel. To ensure parallel read out, set the VMS input of all detectors to VDD (A in the table below).

In applications where two or more linearly connected detectors are read out sequentially (in series), set the VMS input of the first detector to VDD and the VMS input of each subsequent (second and later) detector to GND while connecting the EXTSP input of each subsequent detector to the EOS output of each respective preceding detector (B in the table below). The CLK and RESET pulses should be shared among all detectors and the Video output terminals of all detectors are connected together. The maximum number of detectors that can be daisy-chained together is limited by the maximum Video output capacitance requirement.

	Operation Mode	VMS	EXTSP
А	Master configuration: Parallel readout: all detectors Serial readout: 1 <sup>st</sup> detector only	VDD	Don't care
В	Slave configuration: Serial readout: 2 <sup>nd</sup> and later detectors	GND	Preceding detector's EOS should be input

#### Readout circuit

In order to minimize noise and to maximize performance, an operational amplifier should be placed as close to the detector to amplify the Video signal.

Information furnished by X-Scan Imaging is believed to be accurate and reliable. However, no responsibility is assumed by X-Scan Imaging Corporation for its use. Users are responsible for their products and applications using X-Scan Imaging components. To minimize the risks associated with users' products and applications, users should provide adequate design and operating safeguards. No responsibility is assumed by X-Scan Imaging Corporation for any infringements of patents or other rights of third parties that may result from the use of the information. No license is granted by implication or otherwise under any patent or patent rights of X-Scan Imaging Corporation.

© 2014 X-Scan Imaging Corp.

Tel: +1 408 432 9888

107 Bonaventura Dr., San Jose, CA 95134, U.S.A. Fax: +1 408 432 9889

www.x-scanimaging.com